

SENATOR

User Guide

Freeflex Mesh.

SQ-FLX840-16

Lumbar Adjustment.

The height of the lumbar support can be adjusted to give your back additional support in the lumbar region.

ADJUSTMENTS ARE DESCRIBED FROM THE SEATED POSITION.




Seat Height.



Adjust the seat height using the lever under the seat on the right. The hips should be slightly higher than the knees with feet flat on the floor.

ADJUSTMENTS ARE DESCRIBED FROM THE SEATED POSITION.

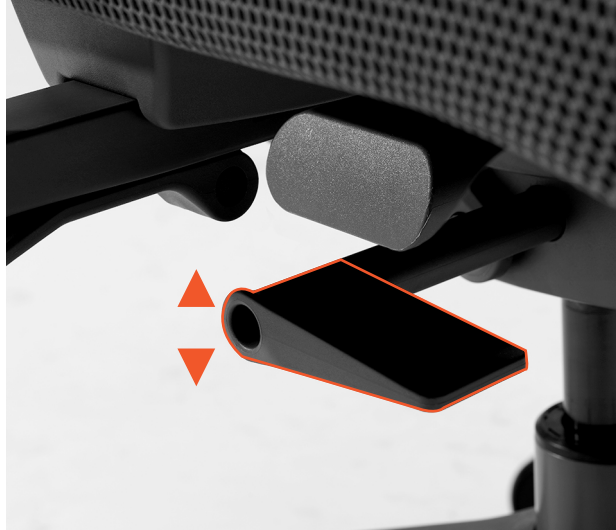

Seat Depth.



Adjust the depth of the seat by pulling the lever out on the right hand side of the seat. With back in contact with the backrest allow at least three fingers distance from the front of the seat to the back of the legs.

ADJUSTMENTS ARE DESCRIBED FROM THE SEATED POSITION.



Multi-position Back Lock.



Release the back lock by pulling the lever out on the left hand side of the seat.

Set the back lock by pulling the lever out again, the back will lock in the upright position or one of two preset recline positions.

ADJUSTMENTS ARE DESCRIBED FROM THE SEATED POSITION.



Height Adjustable Arm.



Arm height may be adjusted using the button, located below the arm pad.

ADJUSTMENTS ARE DESCRIBED FROM THE SEATED POSITION.




Multi-functional Armpad.

By pressing the button located on the inside of the arm pad, the arm pad

can be moved side to side or moved forwards or backwards by sliding

ADJUSTMENTS ARE DESCRIBED FROM THE SEATED POSITION.

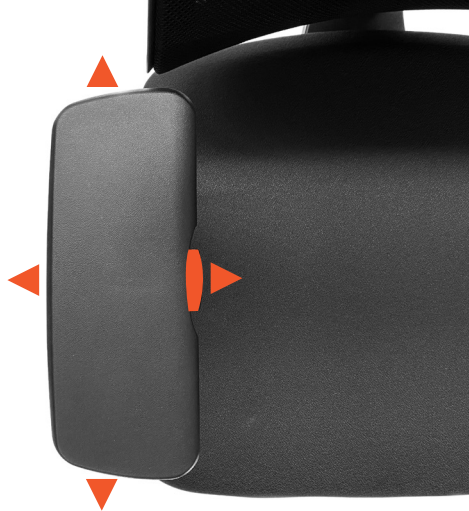

Width Adjustable Arm.



When fitted, armrests may be adjusted in width by pulling down the lever under the base of the arm. The arm is then adjusted to the width required and the lever is pushed up to secure.

ADJUSTMENTS ARE DESCRIBED FROM THE SEATED POSITION.



Additional User Guidance.

CORRECT USE

This office swivel chair is designed for a user weight of up to 150kg and should only be used for the purpose intended while exercising due care and attention. Using it inappropriately (eg. as a stepladder, sitting on the armrests) could result in accidents.

CASTORS

Different Castors are available, for the sake of your safety and for use on different types of flooring in accordance with safety regulations: Hard castors for soft floors (standard). Soft castors for hard floors are optional. Changing castors: this might be necessary, for instance, after moving office, or after the installation of a new floor surface – simply pull out the castors and push new ones in.

Care & Maintenance.

PLASTIC PARTS

Mild soapy water is suitable for cleaning. Please do not use any aggressive cleaning materials or bleach-based cleaning agents.

UPHOLSTERY

In the case of light soiling to the upholstery, please only use suitable mild detergents. The upholstery should only be changed by skilled persons.

To maintain the character and durability of the upholstery, it should be vacuumed on a regular basis.

LEATHER

Leather is a natural product that will stretch and change colour over time, grain details and markings give the material its unmistakable character.

Rub off light soiling with a soft woollen cloth. Heavier soiling should only be treated with cleaners designed for the purpose. Avoid direct prolonged exposure to direct sunlight.

SERVICING

Servicing work, such as exchanging or working on the gas-lifts, may only be carried out by trained Senator Group personnel.

SENATOR Part of **The Senator Group**

Global Headquarters
Altham Business Park
Accrington
Lancashire
BB5 5YE
T +44 [0]1282 725000

thesenatorgroup.com

Issue-1.0
03.21