User GuideGuide de l'utilisateur Bedienungsanleitung Guía del usuario Manuale d'istruzioni

SENATOR

Hauteur d'assise.


Sitzhöhenverstellung.

Adjuste de altura del asiento.

Impostazione altezza del sedile.

Adjust the seat height using the lever under the seat on the right. The hips should be slightly higher than the knees with feet flat on the floor.



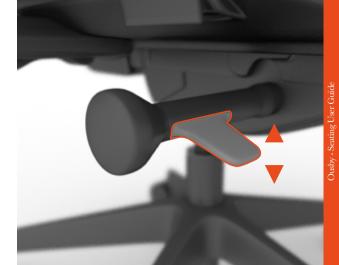

Profondeur de siège.


Sitztiefe.

Profundidad del asiento.

Profondità sedile.

Adjust the depth of the seat by pulling the lever out on the right hand side of the seat. With back in contact with the backrest allow at least three fingers distance from the front of the seat to the back of the legs.



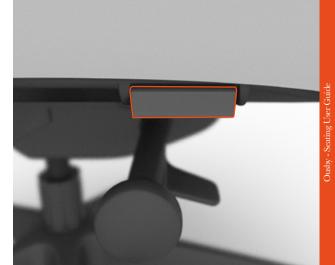


Rückenschloss und -neigong Bloqueo trasero y inclinación.

Blocco e inclinazione posteriori.

The control on the left-hand side under the seat, will either lock the seat and backrest in a fixed position, or release the lock so that the seat and backrest moves simultaneously in a fixed ratio.

The control can be rotated to lock in a number of positions. To release the lock, the control is rotated but will not release until pressure is applied to the backrest.



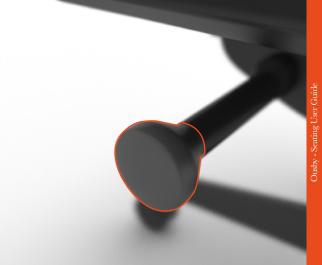

Torsion arriére.


Ruckenlehnen-Widerstand.

Ajuste de tensión del resplado.

Impostazione della tensione schienale.

Pressure of the backrest can be varied to suit the user by using the rotational control on the right hand side of the chair next to the height adjustment lever. The control can be rotated forward to increase the pressure or backwards to reduce the pressure.



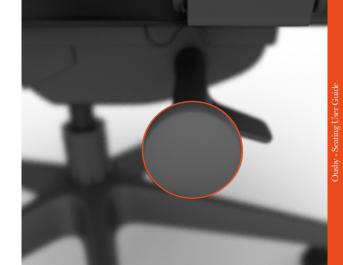

Height Adjustable Arm.

Accoudoir réglable.

Armhöhenverstellung.

Ajuste de altura de apoyo de brazos.

Impostazione altezza del bracicolo.

Arm height may be adjusted using the button, located below the arm pad.





Width Adjustable Arm.

Accoudoirs réglables en largeur. Breitenverstellbare Armlehnen. Apoyabrazos ajustables en anchura. Braccioli regolabili in larghezza.



Width adjustment is a standard feature, armrests may be adjusted in width by pulling down the lever under the base of the arm. The arm is then adjusted to the width required and the lever is pushed up to secure.



Lumbar Adjustment.

Torsion arriére.

Ruckenlehnen-Widerstand.

Ajuste de tensión del resplado.

Impostazione della tensione schienale.

The height of the lumbar support can be adjusted to give your back additional support in the lumbar region.



Additional User Guidance.

Guide complémentaire Weitere Benutzerhinweise. Directrices adicionales para el usuario. Istruzioni aggiuntive.

CORRECT USE

designed for a user weight

CASTORS

your safety and for use on

Care & Maintenance.

Entretien général et maintenance. Pflege und Wartung. Cuidado y mantenimiento. Cura e manutenzione.

PLASTIC PARTS

tild soapy water is suitable or cleaning. Please do not to see any aggressive cleaning naterials or bleach-based leaning agents.

UPHOLSTERY

to the upholstery, please only use suitable mild detergents. The upholstery should only be changed by skilled persons. To maintain the

character and durability of the upholstery, it should be vacuumed on a regular basis.

LEATHER

Leather is a natural product that will stretch and change colour over time, grain details and markings give the material its

Rub off light soiling with a soft woollen cloth. Heavier soiling should only be treated with cleaners designed for the purpose. Avoid direct prolonged exposure to direct sunlight.

SERVICING

Servicing work, such as exchanging or working on the gas-lifts, may only be carried out by trained Senator personnel.

SENATOR Part of The Senator Group

Global Headquarters Altham Business Park Accrington Lancashire BB5 5YE T +44 [0]1282 725000

thesenatorgroup.com

Issue-2.0 4681 | 11.21