

How to adjust your chair.

Pluto Plus Mesh

Torasan™

Pluto Plus Mesh

Adjustments

Seat Height

Adjust the height of the chair by lifting the lever on the right-hand side and removing weight from the seat.

Adding weight onto the seat and lifting the same lever will lower the height of the chair.

Lumbar Support

The integrated lumbar support located on the back of the chair can be adjusted up or down so the curve of the lower spine is supported.

Height Adjustable Arms

Selected models only

Adjust the height of the arms by pressing the lever located underneath the front of the arm pad and raising to the desired height. Release the lever to lock in position.

Fold Down Arms

Selected models only

To fold away the arms, depress the button at the base of the arm to unlock and rotate the arm backwards.

To return the arm to its normal position simply pull forward until the lock re-engages.

Headrest

Selected models only

Tilt, lift or lower the ratchet height adjustable headrest to preferred position.

Mechanisms

Synchronised Mechanism

The mechanism provides a synchronised tilting action where the seat and back recline together at a fixed ration of 3:1.

The chair can be left in 'free-float' motion. Push down on the left-hand side front lever to lock in 4 positions.

Optional Features

Multi-Functional Arm Pad

Selected models only

Offers width adjustment and forwards/backwards pad positioning by sliding the arm pad.

Seat Depth (60mm)

The seat depth can be adjusted by pulling up the left-hand side rear lever.

Slide the seat forward or backward into the desired position.

Torassen™

torassen.co.uk